




SUREFOOT™
QUEENSLAND
CONCRETE FREE FOOTING SYSTEM

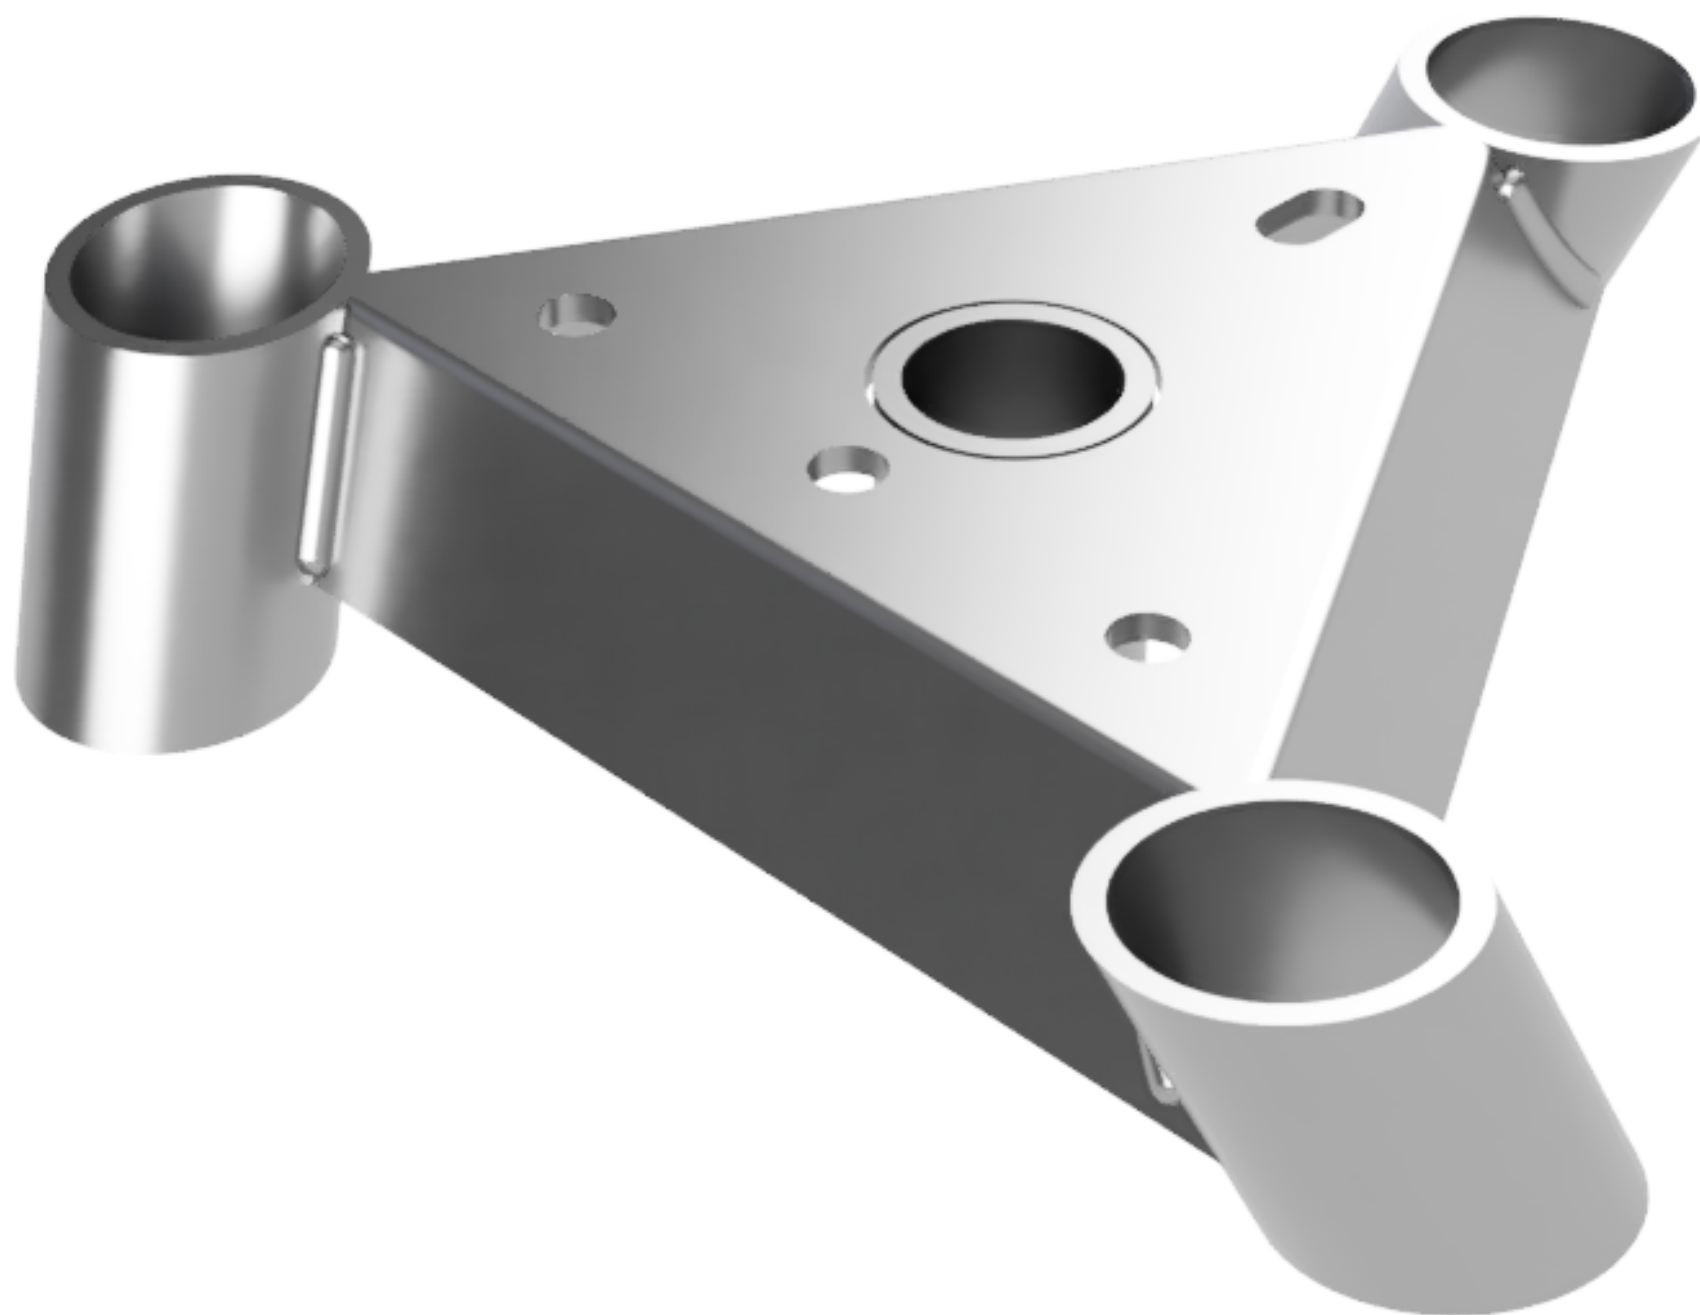

T150 3W – 35kn






Bolting Pattern
147mm x 3 x 16mm Holes

Micro Piles
3 x 32NB (Nomial Bore) 42.4OD Galvanised Light, Medium & Heavy

Load Capacity
Up to 35kn

Average installation time
20 Minutes approx.

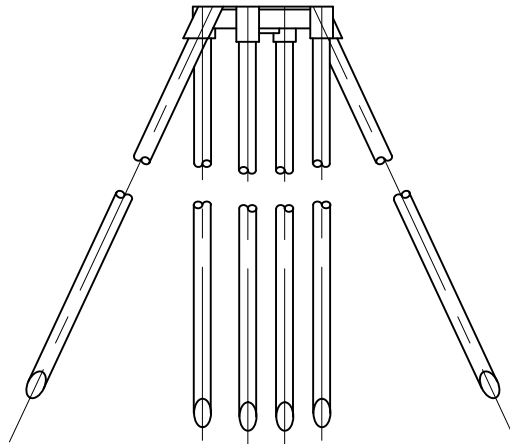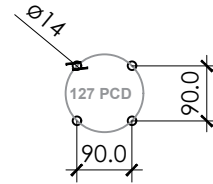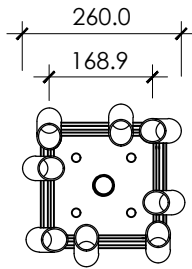

NTS

SUREFOOT SCHEDULE		
TYPE	EMBEDMENT (mm)	PILE SIZE
S150-8W	AS SPECIFIED	AS SPECIFIED