




SUREFOOT™
QUEENSLAND
CONCRETE FREE FOOTING SYSTEM

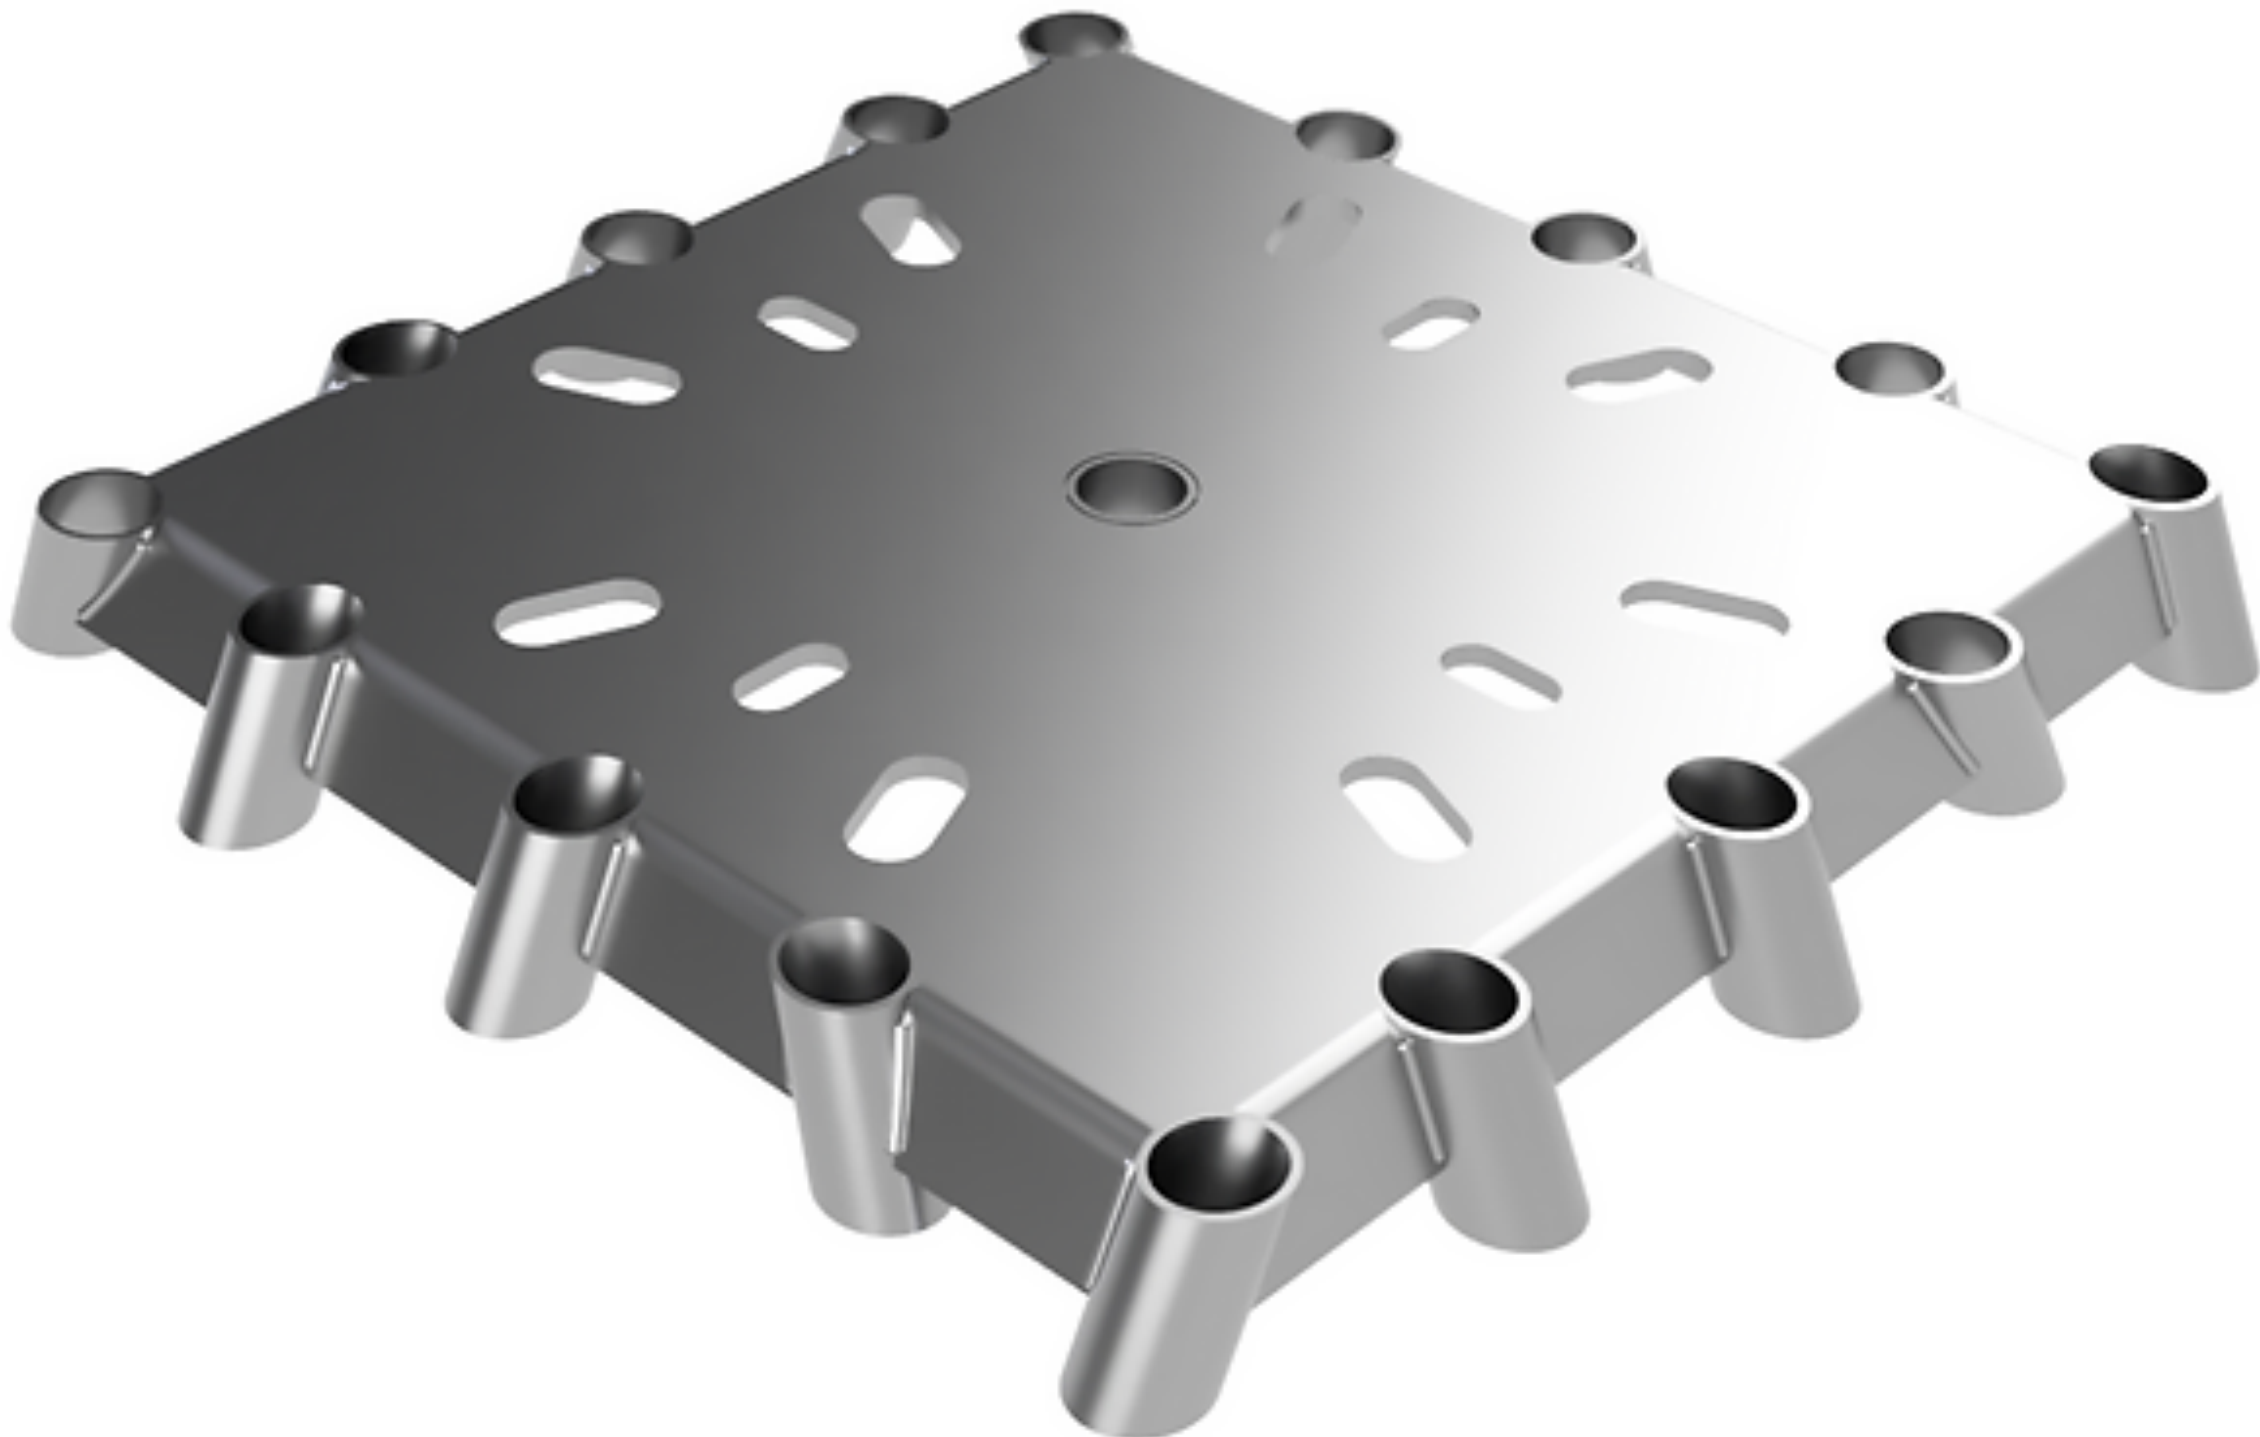

S600 12P – 200kn



Bolting Pattern(s)

350-400 PCD x 4 x 26mm holes / 432-500 PCD x 4 x 26mm holes

Micro Piles


16 x 32mmNB (Nomial Bore) 42.4OD Galvanised

Load Capacity

Up to 300kn

Average installation time

45 Minutes approx.

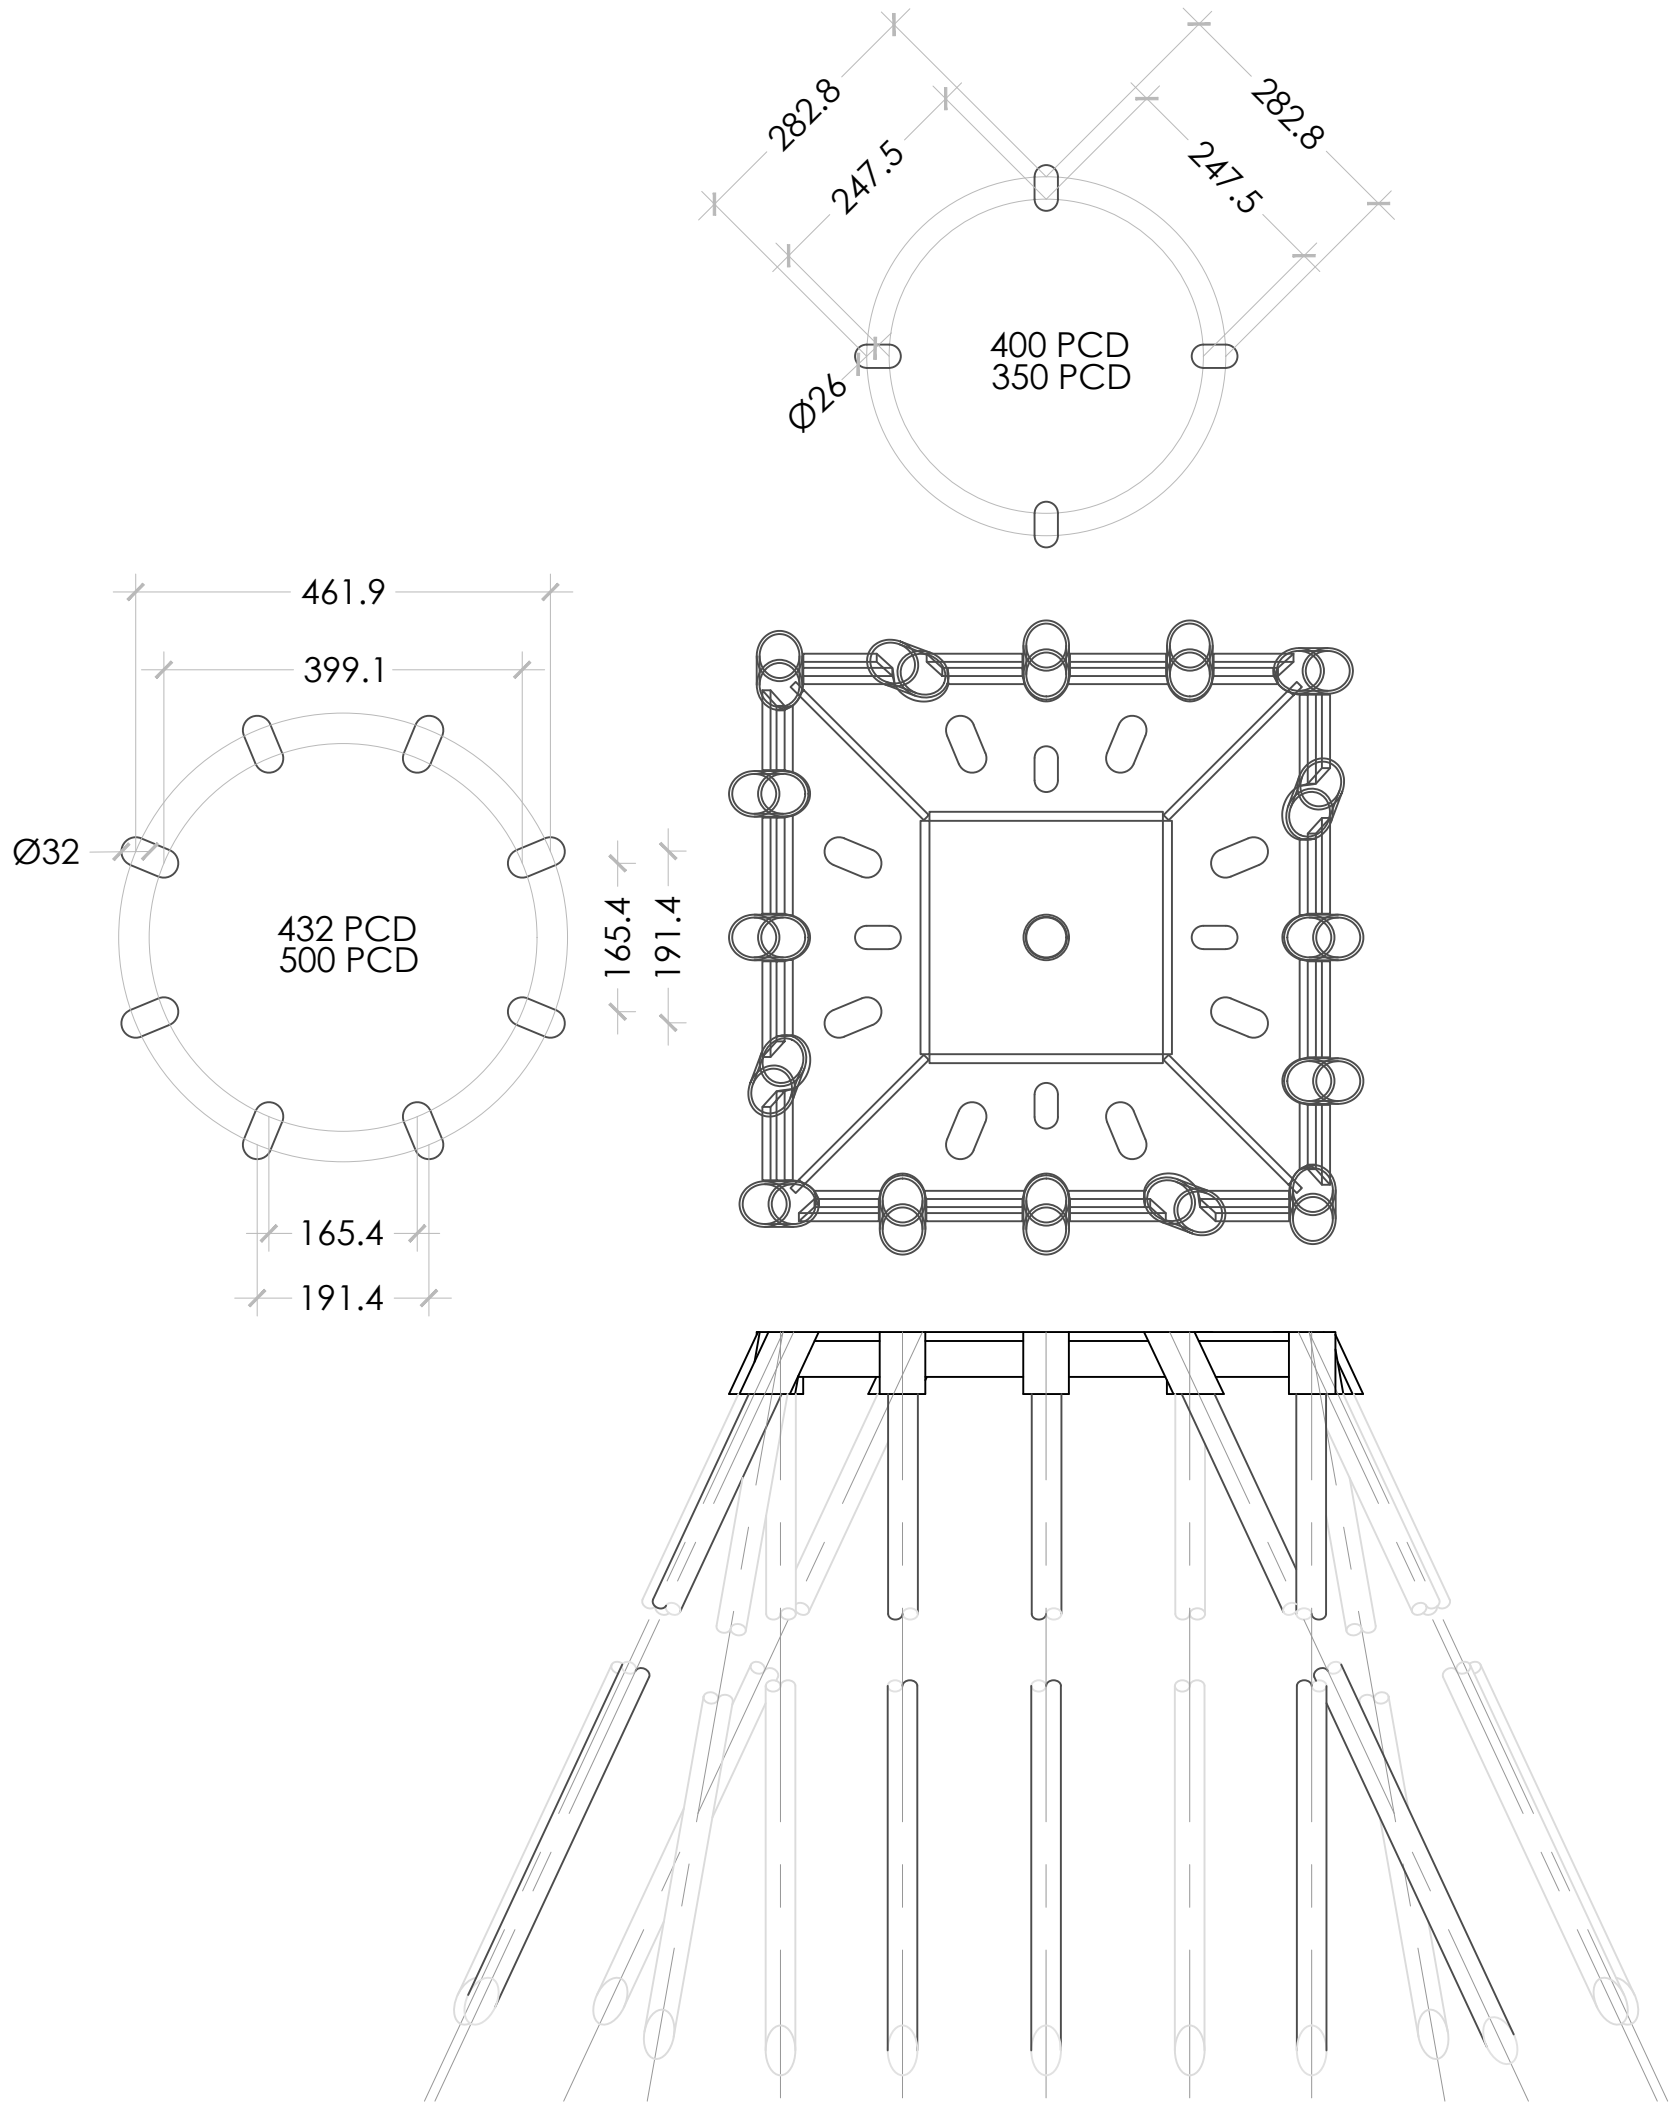

SUREFOOT DETAIL

NTS

SUREFOOT SCHEDULE		
TYPE	EMBEDMENT (mm)	PILE SIZE
S600 - 16P	AS SPECIFIED	AS SPECIFIED

CLIENT:  1300 64 64 23 surefootqld.com.au	PROJECT:	TITLE:
	SITE ADDRESS:	DESIGN ENGINEER: AG
		DATE: 01/07/2020