




**SUREFOOT™**  
**QUEENSLAND**  
CONCRETE FREE FOOTING SYSTEM

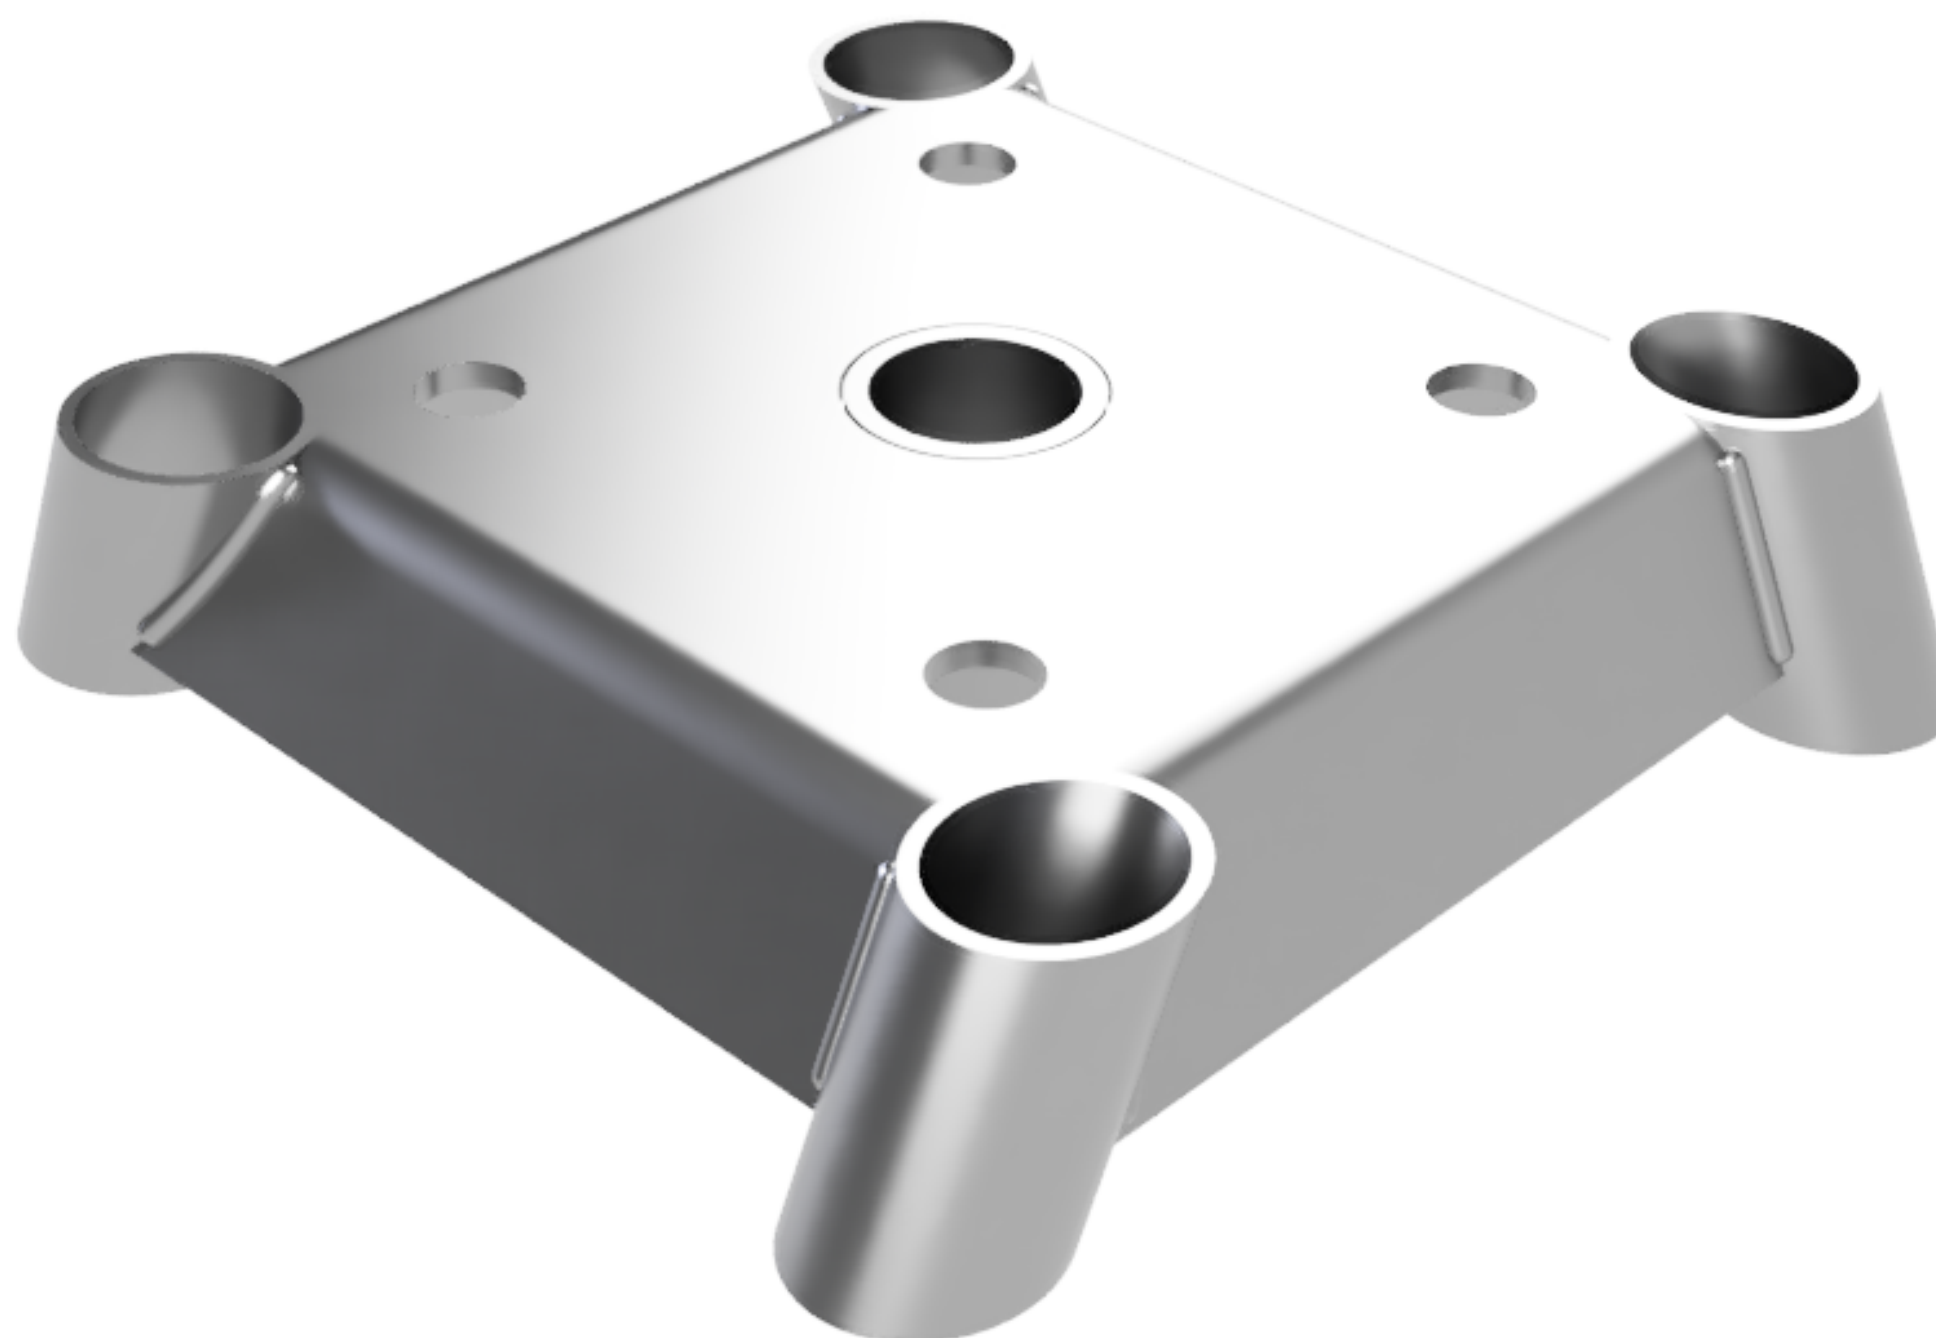

**S250 4P – 75kn**





Bolting Pattern(s)  
140mm centres x 4 x 22mm holes

Micro Piles  
4 x 32mmNB (Nomial Bore) 42.4OD Galvanised

Load Capacity  
Up to 75kn

Average installation time  
20 Minutes approx.

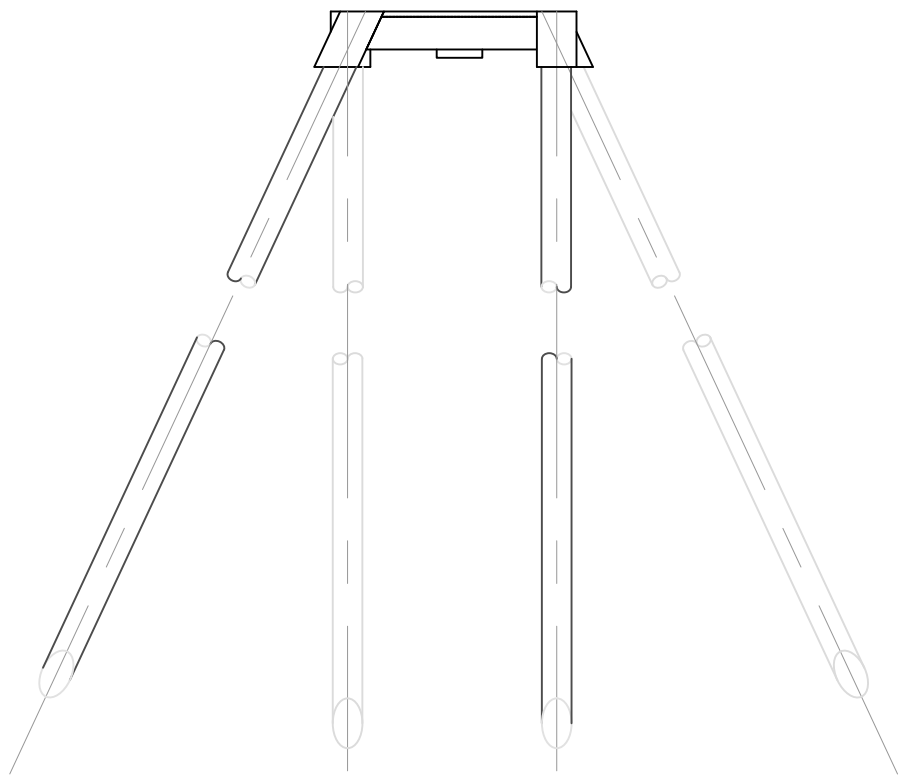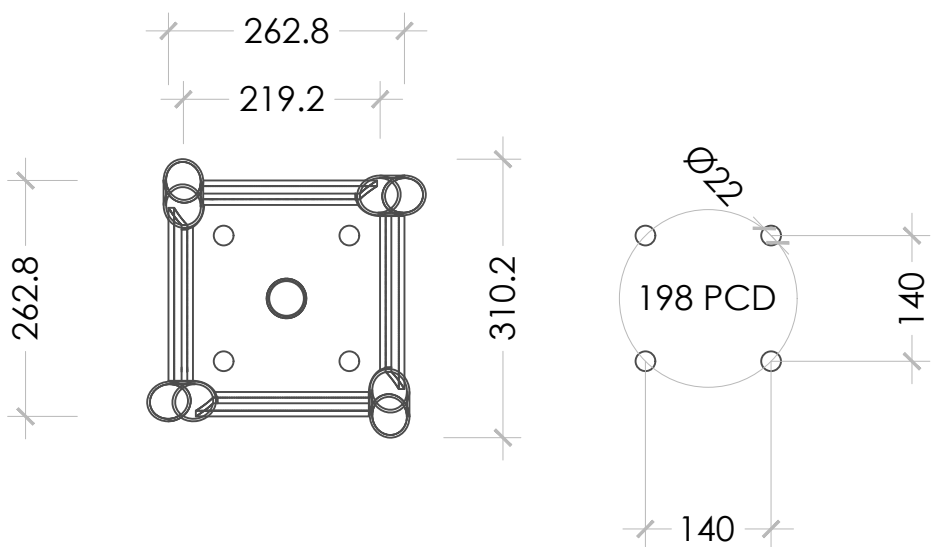


NTS

SUREFOOT SCHEDULE		
TYPE	EMBEDMENT (mm)	PILE SIZE
S250 - 4W	AS SPECIFIED	AS SPECIFIED

<p>CLIENT:</p>  <p><b>SUREFOOT</b> QUEENSLAND CONCRETE FREE FOOTING SYSTEM</p> <p><b>1300 64 64 23</b> surefootqld.com.au</p>	PROJECT:	TITLE:
	SITE ADDRESS:	DESIGN ENGINEER: AG
		DATE: 01/07/2020

SUREFOOT DETAILS

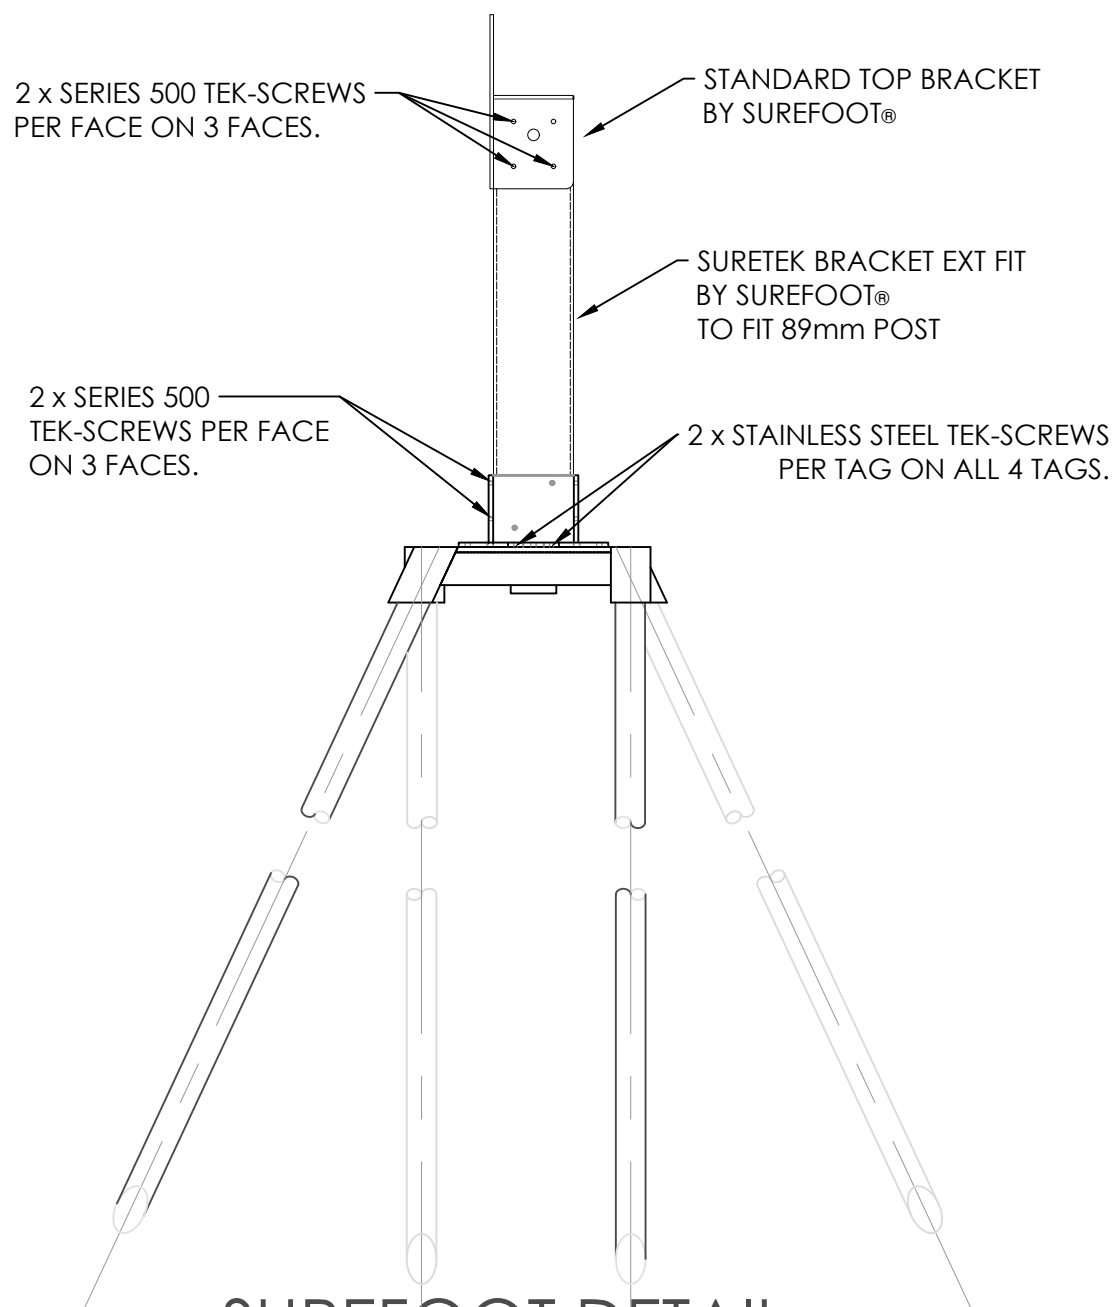

**SUREFOOT DETAIL**  
NTS

SUREFOOT SCHEDULE		
TYPE	EMBEDMENT (mm)	PILE SIZE
S250 - 4W	AS SPECIFIED	AS SPECIFIED

CLIENT:



PROJECT:

SITE ADDRESS:

TITLE:

**SUREFOOT DETAILS**

DESIGN ENGINEER: AG

DATE: 01/07/2020